

# HEATIT EXTERNAL ROOM SENSOR



Heatit External Room Sensor is designed for use with Multireg and Heatit thermostats. The sensor can be mounted directly on a wall or on the outside of a wall box. Fits into most System-55 frames. The product is delivered in a matte finish.

When used with a thermostat, dimmer or other products that emit heat, it is recommended that the sensor be mounted below the other products.

It is not possible to connect the sensors in series or in parallel.

## PRODUCT INFO Heatit External Room Sensor

### FEATURES

- External room sensor
- Designed for use with Heatit or Multireg thermostats
- Fits into multigang frames
- May be placed in a standard wall box or directly on the wall
- Must be wired to the thermostat
- For indoor use

### TECHNICAL DATA

NTC	10 kΩ @ 25°C
Cable diameter	Ø1.5mm <sup>2</sup>
Size (LxWxH)	84 x 84 x 20mm
IP Code	IP 21

Approvals	CE
-----------	----

### MAINTENANCE

The device is maintenance-free, but must never be covered. Only for indoor installation.

WARRANTY	2 years
----------	---------

ART. NO.	PRODUCT	COLOR
54 301 31	Heatit External Room Sensor NTC 10kΩ	White RAL 9003
54 301 32	Heatit External Room Sensor NTC 10kΩ	White RAL 9010
54 301 33	Heatit External Room Sensor NTC 10kΩ	Black

