

HEATIT Z-TEMP3

Quick Guide

PRODUCT
DOCUMENTS


Heatit Z-Temp3 is a great choice for the restoration or renovation of existing buildings, as it is easy to install without the need for wiring. We recommend using multiple 230VAC devices to create a mesh network.

QUICK START

1. Insert the batteries or alternatively connect the cable supplied with the Heatit Transformer 230VAC (Art. no. 45 126 48).
2. Mount the device directly on the wall or on a junction box.
3. If using a power supply instead of batteries, Connect the wires according to the description in Chapter "Connections". Turn on the voltage.
4. Set the primary controller in add mode (security/non-security).
5. Hold the Center button until "OFF" is shown in the display (approx. 5 seconds).
6. Press the "+" button once to reach "CON", and hold the middle button "≡" until the display shows a rotating pattern.
7. The thermostat will display "INCL" when the thermostat is successfully added.

NB! If adding/removing fails, Err (error) will appear.

Article no. 45 126 90 45 126 91	Doc. version 2024-C	Doc. date 01.09.2024
---------------------------------------	------------------------	-------------------------

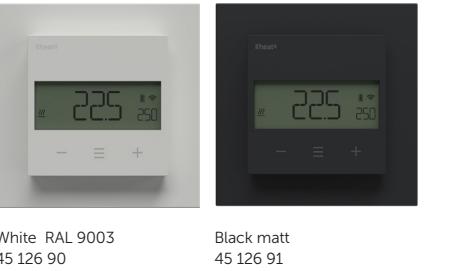

INTRODUCTION

Heatit Z-Temp3 is a battery-operated thermostat designed for controlling waterbased heating systems. Used in combination with the Heatit Z-Water2, you can control your heating system through the Z-Wave® network or via the buttons on the front panel. The thermostat has a user-friendly interface.

Heatit Z-Temp3 has 3 modes: Heat, Cool, and Eco.

The thermostat fits into System 55 frames, and may be mounted alongside other equipment such as e.g dimmers or light switches. Heatit Z-Temp3 can also be mounted directly on the wall or placed freely, e.g. on a shelf.

Heatit Z-Temp3 can be set as a master thermostat. This means that you can set the setpoint and mode on one unit, and it will automatically send the setpoint and mode to other connected units.


All communication between Heatit Z-Temp3 and the controlled device is 100% wireless.

Heatit Z-Temp3 uses 2x AAA batteries, but you can also connect the device to an external power source. The Heatit Transformer 230VAC (45 126 48) is recommended for this purpose.

Heatit Z-Temp3 can be associated with Heatit ZM Single Relay, other Z-Wave relays, Heatit ZM Thermostat, Heatit Z-TRM6 Thermostat and other Z-Wave devices to control other types of heating solutions.



To access the batteries and power connector, or to mount the device, hold the sides of the display and gently pull outwards to detach the thermostat from the mounting plate.

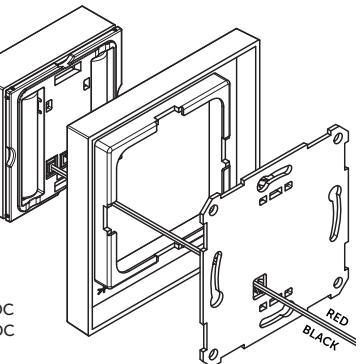

INSTALLATION

Remove the thermostat from the frame and mounting plate. Insert the 2x AAA batteries in the thermostat or connect the connector on the back using the optional cable. The thermostat offers versatile installation options, allowing it to be mounted on a wall, on a junction box or placed at a preferred location.

For wall mounting, attach the mounting plate using either screws or double-sided tape. If mounting on a junction box, use screws. Once the mounting plate is in place, carefully push the thermostat back onto the mounting plate.

NB! Be careful when installing the batteries, ensuring their polarity matches the indented markings on the plastic.

FACTORY RESET

Enter the menu by holding the Center button for about 5 seconds, navigate in the menu with the "+" button til you see FACT. Press the Center button until you see "--" blinking in the display, then hold for about 5 seconds to perform a reset. You may also initiate a reset by holding the Right and Center buttons for 55 seconds.

When either of these procedures has been performed, the thermostat will perform a complete factory reset. The device will display "RES" for 5 seconds while performing a factory reset. When "RES" is no longer displayed, the thermostat has been reset.

Please use this procedure only when the primary controller is missing or otherwise inoperable.




DISPLAY ICONS

ICON	DESCRIPTION
	This icon will be displayed while the relay is on and the thermostat is in either Heating or Eco mode.
	This icon will be displayed while the relay is on and the thermostat is in Cooling mode.
	This icon shows the current signal strength.
	This icon shows the battery status.

DISCLAIMER

Battery lifespan may vary based on the installation environment and usage conditions.

ORDER OF ASSEMBLY

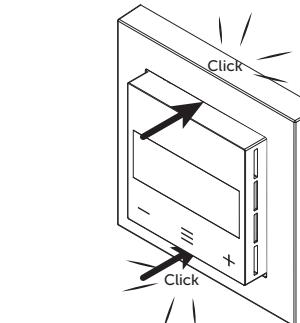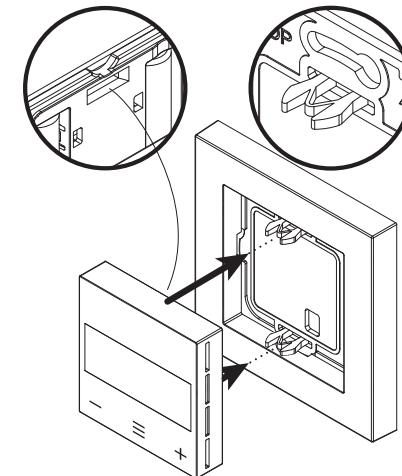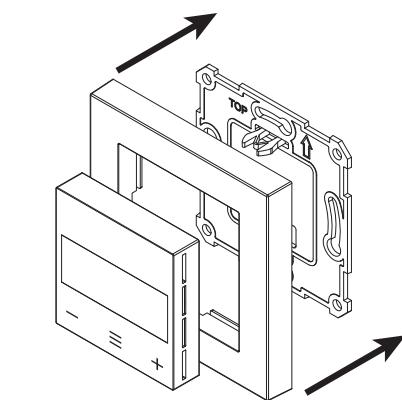

TECHNICAL DATA


Protocol	Z-Wave, 868.4MHz
Chip	Z-Wave 800 chip
Rated voltage	2.7VDC to 3.3VDC
Battery	2xAAA
Power consumption	<1W
Ambient temperature	5°C to 40°C
Temperature range	5°C to 40°C
Storage temperature	-30°C to 70°C
Hysteresis	0.3°C to 3.0°C (Default 0.5°C)
Humidity	10% to 85% RH
Range RF	Min. 40 meter
IP Code	IP21
Size (LxWxH)	84 x 84 x 22mm
Approvals	Z-Wave Plus, CE, Reach, RED, RoHS

Working frequency 868.4MHz, Max output power 12.49dBm. The distance between user and products should be no less than 20 cm. There is no restriction to use this product across the EU countries.

Hereby, Heatit Controls AB declares that this device is in compliance with the essential requirements another relevant provisions of Directive 2014/53/EU.

MAINTENANCE

The product is maintenance-free. Indoor use only.

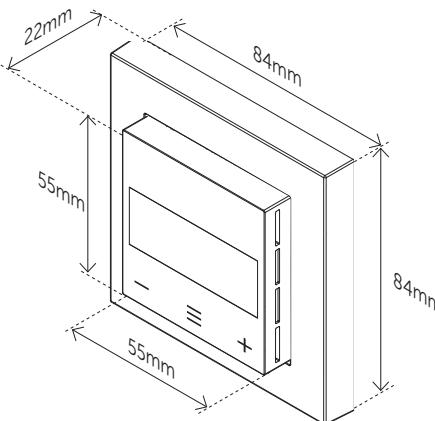

We develop and design our products according to our strict quality requirements (ISO 9001) and environmental requirements (ISO 14001). All electrical installations must be carried out by an authorized electrical installer. The product must be installed in accordance with our installers manual and national building codes. Any wrongfull installation, misuse, damage of the product, is not covered under warranty. Updated documentation is available at www.heatit.com and/or documents.heatit.com. Heatit Controls AB can not be held liable for any type of errors or omissions in our product information. Product specifications may change without further notice.

